



# DRIVA, SELF DRILLING FIXING

## Mounting in drywall


**ESSVE**  
GET IT DONE

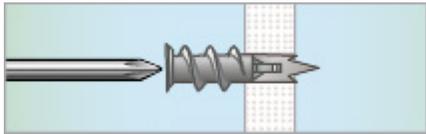

1. Screw the self-drilling fixing directly into the wall. Use a crosshead bits, PZ 2 (Pozidrive) on both the fixing and screw.

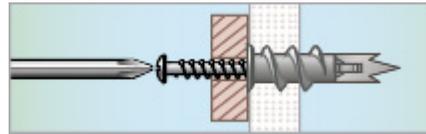

2. Screw on the detail to be secured using appropriate screws. In this example, TP12 with a pan head, which can support a detail thickness up to 12 mm.

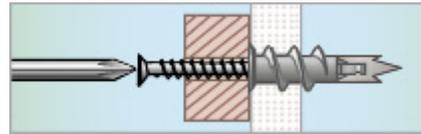

3. Same operation with TF27 with a countersunk head, which can support a detail thickness up to 27 mm.