



# PROGRAMA PLUS FRAME SCREW, UNHARDENED


## Mounting in wood, concrete, lightweight concrete and brick

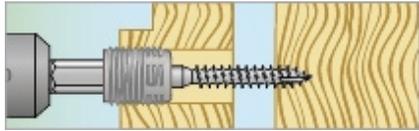


**1. Mounting in wood**  
Installation depth min. 45 mm. Drill through 14 mm holes with Frame screw drill DLT 5. If the frame is pre-drilled, installation takes place directly.

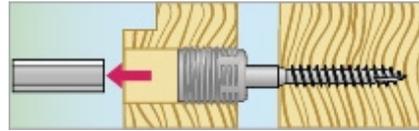


2. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.

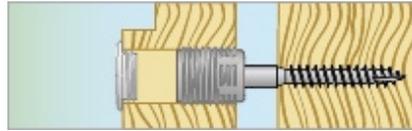


3. Cover the hole with a plastic cover in appropriate color. Also available in wood.

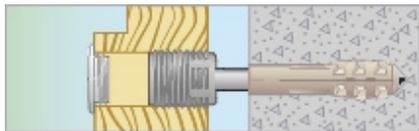


**Mounting in concrete**  
Use Programa 70 or 90 mm together with Nylonplug N. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.

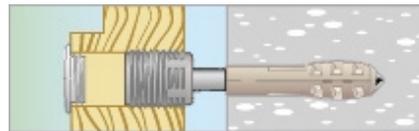

**Mounting in lightweight concrete**  
Use Programa 140 mm together with Nylonplug NL or GXL. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.

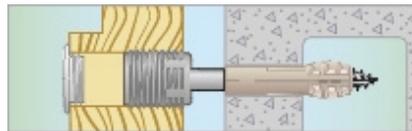

**Mounting in hollow wall**  
Use Programa 140 mm together with Nylonplug NL or GXL. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.

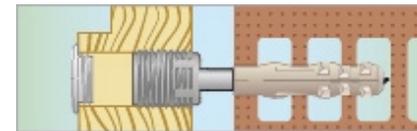

**Mounting in hollow brick**  
Use Programa 140 mm together with Nylonplug NL or GXL. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.