


CLIPS PLUG


Mounting

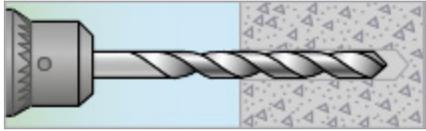

1. Drill hole.



2. Knock the Clips plug into the drill hole. Knock the plug in until it is flush with the surface of the substrate.

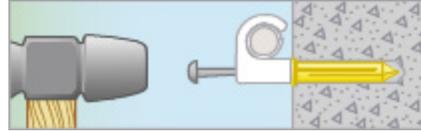

3. Knock in a cable clip with the corresponding nail.