



NAIL PLUG / HAMMERFIXING


Mounting

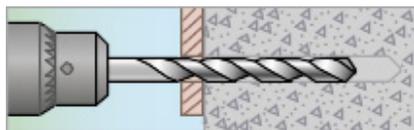

1. Drill hole according to Technical data below.

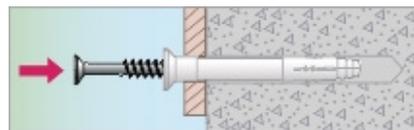

2. Press/knock in the Nail plug into place.

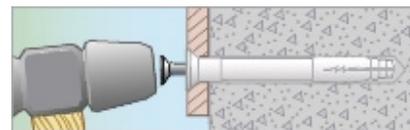

3. Hit the nail with a hammer. For painted 5 mm Nail Plugs use rubber hammer. For dim. 10 mm the plug and nails are supplied separated in the pack. The plug must first be pushed into the hole and then the nail is knocked in.

Technical data

Dimension x length mm	Min. Mounting depth mm	Max. Fixture thickness mm	Drill diameter mm	Recess no
5x37	22	15	5	PZ2
5x47	22	25	5	PZ2
6x40	30	10	6	PZ2
6x55	30	25	6	PZ2
6x67	37	37	6	PZ2
6x80	30	50	6	PZ2
8x60	35	25	8	PZ2
8x75	35	40	8	PZ2
8x100	35	65	8	PZ2
8x120	35	85	8	PZ2
10x100	50	50	10	PZ2
10x120	50	70	10	PZ2

Recommended load in concrete and brick

Dimension mm	Anchorage depth mm	Tension load kg	Shear load kg
5	20	20	28
6	30	26	40
8	40	40	64
10	45	50	78