

148.5*210 mm

LIMIT

Bruksanvisning/Manual

Maskinvattenpass

NOGGRANNHET ANVÄNDNING


$\pm 25\%$ av skalvärdet. Tillverkad enligt DIN 877/2276.
Rengör vorna före användning. 1 skalstreck = mm/m lutning H / L. Se bild.
Om det är stora temperaturskillnader mellan vattenpassets förvaringsplats och
platsen för användning vänta 2 timmar.

KONTROLL

Placer vattenpasset på ett stabilt och plant underlag. Notera bubblans position
när den har stabiliserat. Vrid vattenpasset 180° och var noga med att passet
placeras på samma plats. Avläs bubblans position på nytt. Bubblans position bör
inte skilja mer än halv gradering.

JUSTERING

Tag bort den svarta skyddshylsan på passets ände. Se bild. Skall bubblan flyttas in
rikning ifrån justermuttrarna skall de båda justermuttrarna vridas medurs.
Använd bifogad haknyckeln. En vridförelse på några grader medför att bubblan
flyttar sig flera gradstreck. Justera och kontrollera tills passet är korrekt inställt.
Kontrollera att båda muttrarna är mjukt åtdragna. Vänta 2 timmar efter justering
och kontrollera på nytt innan passet tas i bruk.

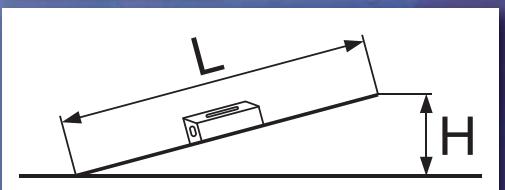

www.limit.se

LIMIT

Bruksanvisning/Manual

Precision Levels

ACCURACY USE


$\pm 25\%$ of scale value. Criterion DIN 877/2276.
Clean the surfaces before use. 1 scale value = mm/m leaning H / L. See photo.
If difference in temperature between place to store level and place to use level
wait 2 hours before use.

CONTROL

Place the level on a stable and flat base which. Read the bubble position. Turn
the level 180° and make sure the level is placed on same place. Read the bubble
position again. The difference of the two positions should not be more than half a
scale graduation.

ADJUSTMENT

Remove the black lid on the side of the level. See photo. To move the bubble in
direction from the adjusting screws, turn the screws clockwise. Use enclosed
wrench. A few degrees movement of the screws move the bubble several scale
graduations. Repeat control and adjustment until the level is correct. Check that
both screws are gently locked. Wait 2 hours after adjustment and control again
before use.

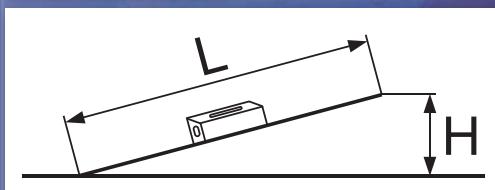

www.limit.se